




A-BS06 AIR BELT SANDER

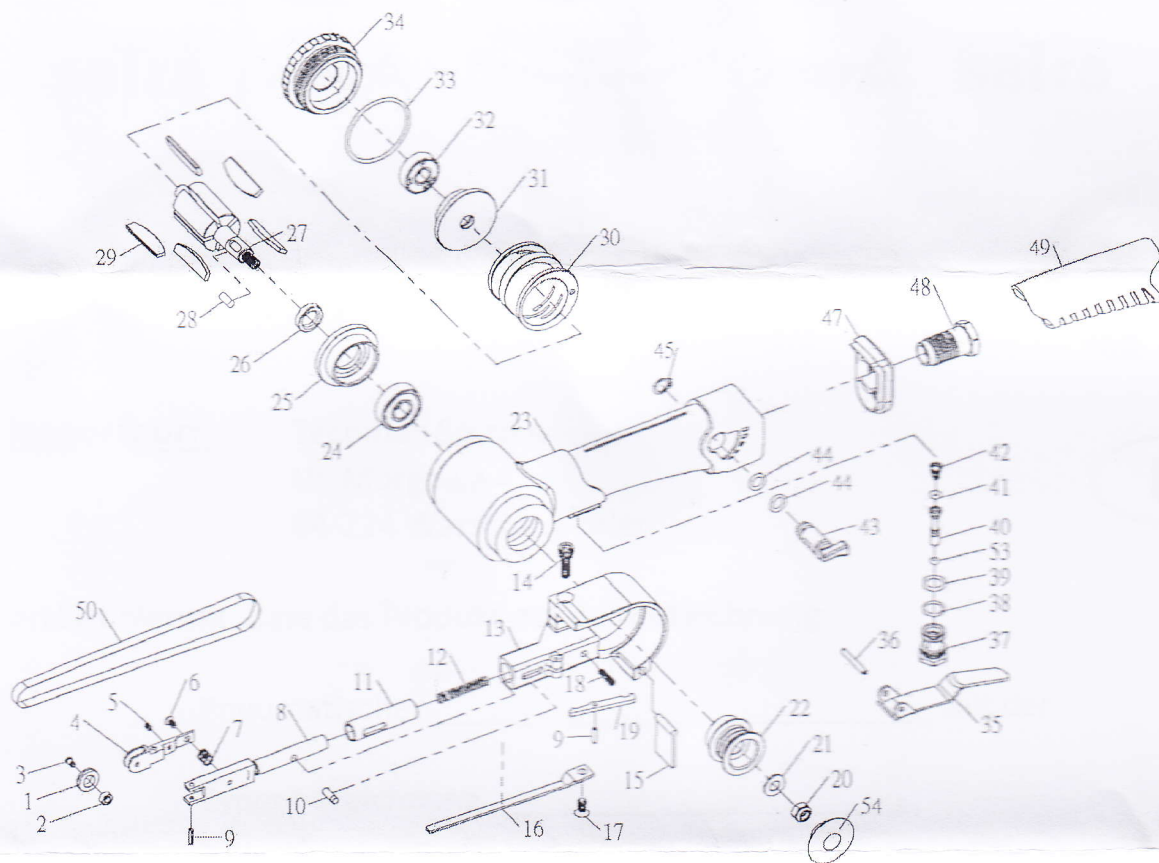

Index No.	Parts No.	Description	Q'ty	Index No.	Parts No.	Description	Q'ty
1	ABS06-001	Idle Pulley	1	27	ABS10-028	Rotor	1
2	B-683T	Ball Bearing (683zz)	1	28	ABS20-034	Parallel Key Both Ends Round 4x4x9.5	1
3	ABS06-003	Idle Pulley Screw	1	29	ABS20-035	Rotor Blade	5
4	ABS06-004	Bracket 6	1	30	ABS20-036	Cylinder	1
5	H2-0304	Set Screw (M3x8)	1	31	ABS20-037	Rear End Plate	1
6	H4-0316	Hexagon Socket Headless Set Screw	1	32	B-608T	Ball Bearing (608zz)	1
7	ABS06-007	Spring	1	33	P-S038	O-Ring (S38)	1
8	ABS06-008	Tension Bar	1	34	ABS20-040	Cap	1
9	SPP-25100	Spring Pin (φ2.5x10)	2	35	ABS20-041	Throttle Lever	1
10	ABS10-010	Stopper Pin	1	36	SPP-30200	Throttle Pin (φ3x20)	1
11	ABS10-011	Guard Bushing	1	37	ABS20-043	Valve Body	1
12	ABS10-012	Tension Spring	1	38	P-S011.2	O-Ring (S11.2)	1
13	ABS10-013	Guard Sub Ass'y 11	1	39	P-9	O-Ring (P-9)	1
14	H1-0515	Head Cap Screw (M5x15)	1	40	ABS20-046	Valve Stem	1
15	ABS10-015	Dust Cover	1	41	P-3	O-Ring (P3)	1
16	ABS10-016	Shoe 10	1	42	ABS20-048	Valve Spring	1
17	H4-0410	Hexagon Socket Headless Set Screw	1	43	ABS20-049	Air Regulator	1
18	ABS10-018	Stopper Spring	1	44	P-7	O-Ring (P7)	2
19	ABS10-019	Stopper	1	45	STW-008	External Stop Ring (STW-8)	1
20	ABS10-021	Hexagon Nut (M6)	1	47	ABS20-053	Exhaust Diffuser	1
21	ABS10-022	Washer (M6)	1	48	ABS20-054	Inlet Bushing	1
22	ABS10-023	Drive Pulley	1	49	ABS20-055	Housing Cover	1
23	ABS10-024	Housing	1	50	ABS06-050	Grinding Belt (#100x10)	1
24	B-6000TT	Ball Bearing (6000ZZ)	1	51	ABS06-051	Grinding Belt (#80x10)	1
25	ABS20-031	Front End Plate	1	52	ABS06-052	Grinding Belt (#120x10)	1
26	ABS20-032	Spacer	1	53	P-AS004	O-Ring (AS-004)	1
				54	ABS10-055	Pulley Cover	1