

ACCESSORIES AVAILABLE
ACCESORIOS DISPONIBLES
ACCESSOIRES DISPONIBLES

BC601	4 oz. Bostitch Air -Tool Lubricant
BC602	1 pint Bostitch Air -Tool Lubricant
BC603	1 pint Bostitch "Winter-Formula" Air-Tool Lubricant
BC604	1 quart Bostitch Air -Tool Lubricant
851385	Loctite Grade 242 (.02 oz.)
N80K2	Remote Control Kit
121072	Softfoot
112630	Dust Shield
112631	Spring Clip for Dust Shield
N89ORK	Kit, O-ring Repair

BOSTITCH®

F28WW-E

PNEUMATIC STICK NAILERS
CLAVADORA NEUMÁTICA ALIMENTADA POR BARRA
CLOUEUR PNEUMATIQUE EN BANDES



TOOL PARTS ILLUSTRATION
ILUSTRACIÓN DE LAS PIEZAS DE LA HERRAMIENTA
ILLUSTRATION DES PIÈCES D'OUTILLAGE

⚠ WARNING:

⚠ ADVERTENCIA:

⚠ ATTENTION:

BEFORE PERFORMING REPAIRS ON THIS TOOL, ALL OPERATORS SHOULD STUDY THIS ILLUSTRATION, AS WELL AS THE PARTS LIST AND OPERATION AND MAINTENANCE MANUAL. OPERATORS SHOULD UNDERSTAND AND FOLLOW ALL SAFETY WARNINGS AND INSTRUCTIONS. KEEP THIS ILLUSTRATION WITH THE TOOL FOR FUTURE REFERENCE. IF YOU HAVE ANY QUESTIONS, CONTACT YOUR BOSTITCH REPRESENTATIVE OR DISTRIBUTOR.

ANTES DE LLEVAR A CABO CUALQUIER REPARACIÓN EN LA HERRAMIENTA, TODOS LOS OPERARIOS DEBERÁN ESTUDIAR ESTA ILUSTRACIÓN, ASÍ COMO LA LISTA DE PIEZAS Y EL MANUAL DE OPERACIÓN Y MANTENIMIENTO. LOS OPERARIOS DEBERÁN ENTENDER Y SEGUIR TODAS LAS ADVERTENCIAS E INSTRUCCIONES DE SEGURIDAD. CONSERVE ESTA ILUSTRACIÓN CON LA HERRAMIENTA PARA PODER CONSULTARLA EN LO FUTURO. SI TUVIERA ALGUNA PREGUNTA, PÓNGASE EN CONTACTO CON SU REPRESENTANTE O DISTRIBUIDOR DE BOSTITCH.


AVANT DE PROCÉDER À LA RÉPARATION DE CET OUTIL, LES OPÉRATEURS DOIVENT ÉTUDIER LA PRÉSENTE ILLUSTRATION AINSI QUE LA LISTE DE PIÈCES ET LE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN ; ILS DOIVENT ÉGALEMENT COMPRENDRE ET OBSERVER LES CONSIGNES DE SÉCURITÉ ET LES INSTRUCTIONS. CONSERVER CETTE ILLUSTRATION AVEC L'OUTIL POUR RÉFÉRENCE FUTURE. SI VOUS AVEZ DES QUESTIONS, COMMUNIQUEZ AVEC VOTRE REPRÉSENTANT OU VOTRE DISTRIBUTEUR DE BOSTITCH.

F28WW-E

PNEUMATIC STICK NAILERS

CLAVADORA NEUMÁTICA ALIMENTADA POR BARRA
CLOUEUR PNEUMATIQUE EN BANDES

See reverse side for available
accessories (not included)

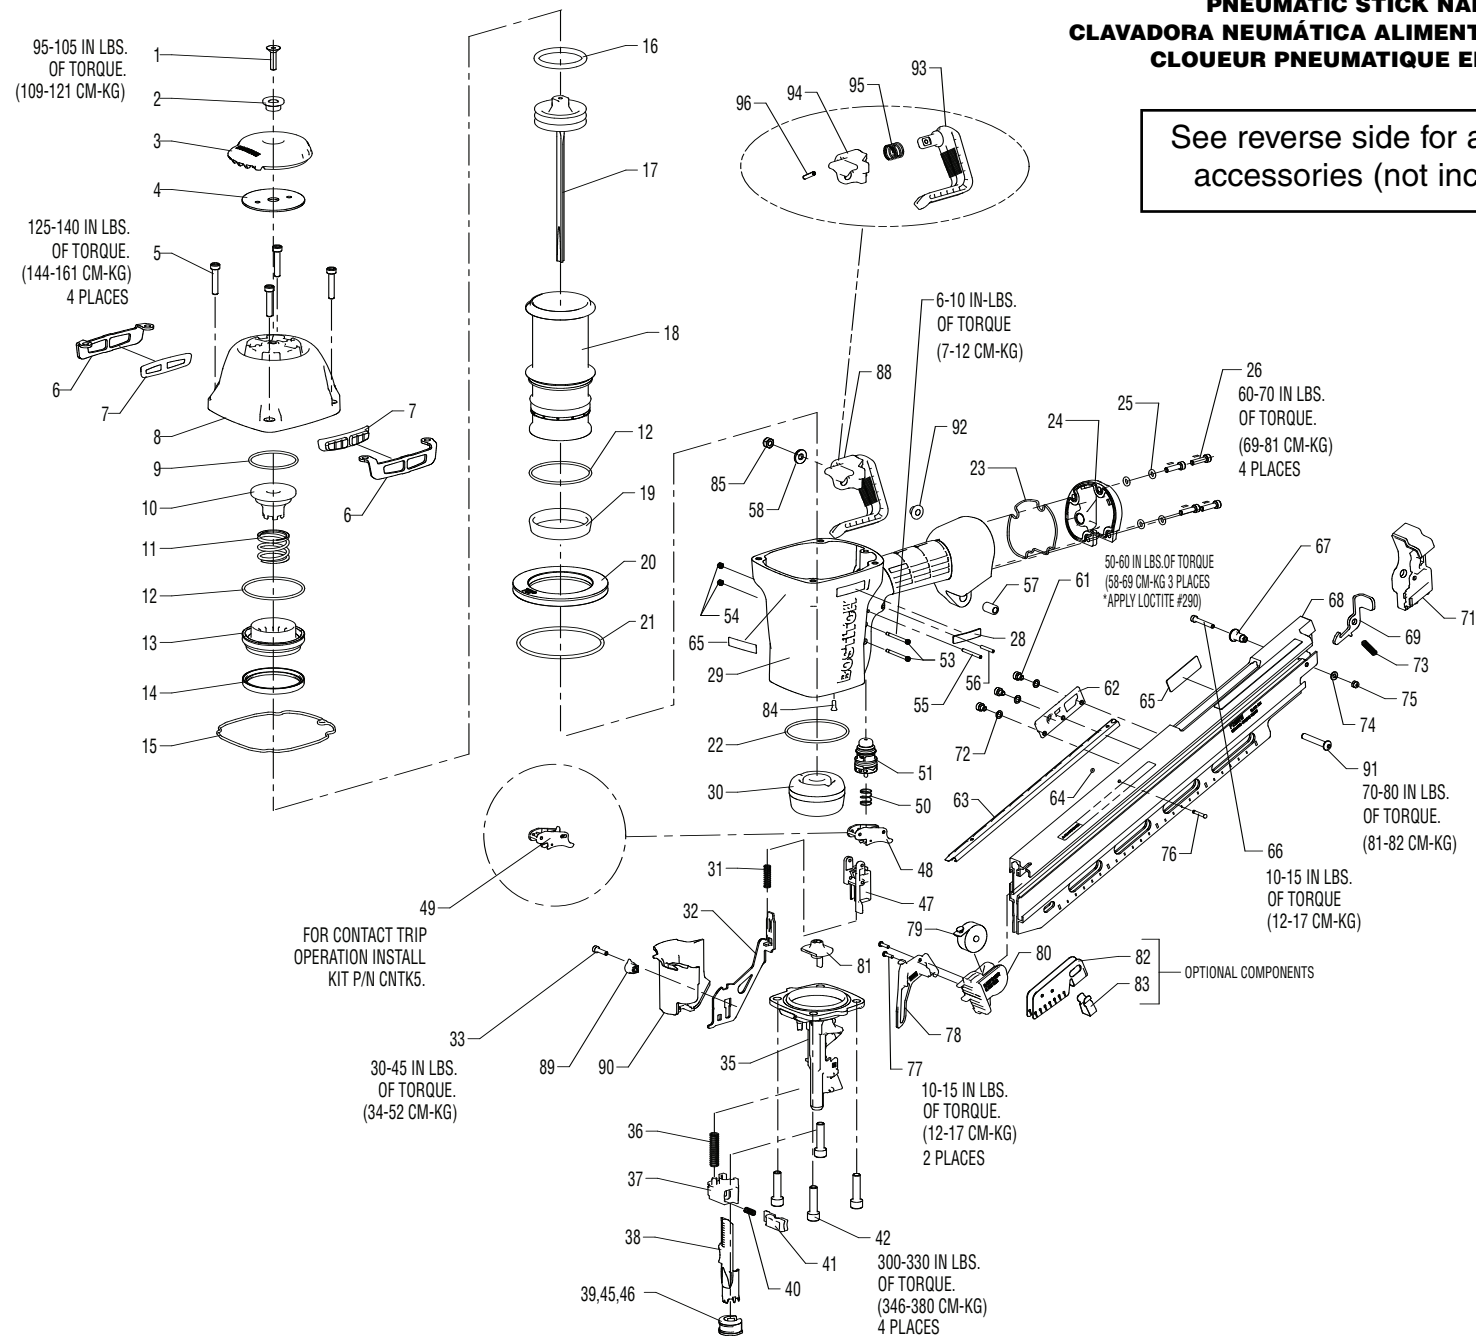

BOSTITCH

	F28WW-E	Parts List:		IP1228-2REVE	
	To be Used with tool parts illustration:			IP1228-1REVC	
	and operation and maintenance manual:			166779	
		Serial Number on the Tool:		F28WW-E 7171	000 and Higher
ITEM	PART #	DESCRIPTION	ITEM	PART #	DESCRIPTION
1	MSF6100-25	SCREW,SFHCS,M6X1.00X25	61	MSC5080-6	SCREW,SHCS,M5X0.80X6
2	163859	BUSHING,EXHAUST DEFLECTOR	62	163828	NUT,TEE
3	163818	DEFLECTOR,EXHAUST	63	159718	LINER,NAIL GUIDE,N88WWB
4	163830	PLATE,CAP	64	166797	O-RING,.056X.060 NBR
5	MSC6100-30	SCREW,SHCS,M6X1.00X30	65	171347	LABEL,FASTENER,F28WW-E
6	163827	PLATE,WEAR	66	100261	SCREW,SHCS,M4X30
7	149819	WEAR GUIDE	67	121472	SPACER,PUSHER LATCH
8	163848	FRAME CAP,MACHINING	68	166784	MAGAZINE,PAD PRINT,F28WW
9	105814	O-RING,1.929X.098	69	166778	LATCH,PUSHER
10	163820	BUMPER,HEAD VALVE	71	116563	CAP END,MAGAZINE
11	163844	SPRING,HEAD VALVE	72	116965	WASHER,PLAIN M5
12	163822	O-RING,2.487X.103XNBR	73	120878	SPRING, PUSHER LATCH
13	163821	LOWER BODY,HEAD VALVE	74	MPW4	WASHER,PWN,M4
14	163823	SEAL,HEAD VALVE	75	MHE4070-100	ELASTIC STOP NUT,M4
15	163845	SEAL,FRAME/CAP	76	121407	PIN,SPECIAL
16	851606	O-RING,1.850X.210	77	100209	SCREW,STRHS,M3X0.5X12
17	163922	ASSEMBLY,PISTON/DRIVER	78	158767	PUSHER,WW
18	163824	SLEEVE,CYLINDER	79	115143	SPRING,CONSTANT FORCE
19	175520	SEAL,CHECK	80	120945	HANDLE,PUSHER
20	163855	RING,CYLINDER SLEEVE	81	163882	GUIDE,DRIVER
21	108718	O-RING,3.484X.139	82	112630	SHIELD,DUST
22	89673	O-RING,2.550X.103	83	112631	SPRING,CLIP
23	163856	SEAL,END CAP	84	163858	PLUG,EXHAUST
24	163843	END CAP,PAINT	85	MHE6100-100	NUT,ESN M6X1
25	T50118	WASHER,PLAIN	88	171354	ASSEMBLY,UTILITY HOOK
26	MSC5080-20	SCREW,SOC HD. CAP M5 X 20	89	163903	BUSHING,TRIP COVER
28	171432	LABEL,MAGNESIUM	90	171338	COVER,TRIP
29	171127	FRAME,OVERMOLD	91	MSB6100-40	SCREW,SBHCS,M6X1.00X40
30	107231	BUMPER,DRIVE	92	171342	WASHER,UTILITY HOOK
31	166781	SPRING,UPPER TRIP	93	171339	HOOK,UTILITY
32	163899	ARM,UPPER CONTACT	94	171340	MOUNT,UTILITY HOOK
33	MSC4070-16	SCREW,SHCS,M4X0.7X16	95	171341	SPRING,UTILITY HOOK
35	163927	NOSE,F28WW	96	UB3811.2	PIN, SPIROL - 5/32X3/4
36	166772	SPRING,CONTACT ARM			
37	108224	CASTING,HOUSING CONTACT			
38	108227	ARM,LOWER CONTACT			
39	121072	ASSEMBLY,TRIP FOOT			
40	115230	SPRING,HOUSING			
41	166777	CASTING,PLUNGER			
42	MSC8125-30	SCREW,SHCS M8X30			
45	121070	FOOT,TRIP			
46	121071	CLIP,TRIP FOOT			
47	163883	GUIDE,ARM			
48	SEQ7	KIT,SEQUENTIAL TRIP CONVERSION			
49	CNTK5	KIT,CONTACT TRIP CONVERSION			
50	100387	SPRING,COMPRESSION			
51	TVA6	KIT,TRIGGER VALVE			
53	108562	SCREW,TRIGGER PIVOT			
54	MHE3050-100	NUT,NYLON M3X.50			
55	100298	PIN,SPIRAL M3X30			
56	MPP030020	PIN,SPIRAL M3X20MM			
57	N70143	BUSHING,RUBBER			
58	MPW6.2	WASHER,SPECIAL			